

**Sentry 1 channel receiver (code hopping)
short range @ 433.92 MHz
1000 transmitter capability type
SEN/HT1 & SEN/HT3 & SEN/HT4**

Connect power relay out put and optional RS232 port as required

Programming:

To Learn a transmitter

Press PLUS 1/LEARN button (display will show Pn- and then 0)
Select the channel number - (to increment channel by 1, press PLUS 1/LEARN
- to increment by 20, press PLUS 20)
and press CLEAR/STORE
operate transmitter from a distance of 1 metre
display will show STO and then current channel number
To exit program mode use PLUS 20 to increment past channel 999

To delete a transmitter

-select channel number as above and press MEMORY/ERASE
(display will show E) and then current channel number