

To adjust the speed/force of your gate closer using one of the four holes in the mounting bracket

A= Least Closing Force/Fastest Closing Speed

D= Maximum Closing Force/Slowest Closing Speed

