
Code change instructions

Take the lock front (if after fitting remove by undoing the

- 2 x fixing bolts from the lock back)
- 1) Turn the lock upside down

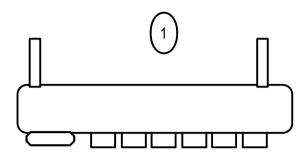


2) Remove the 4 x red screws from the plate and lift the plate off carefully

- -Your code group can consist of from 4 to 6 digits
- -Your code can be a mixture of both letters & numbers But must always be pre-fixed by C to clear (remember for the 2835 the Y button is the free passage button
- -Although your code group is not sequential there are still over 8,000 different code groups
- The code is determined by the number of red tumblers used, blue are non-code
- To increase your code add more red tumblers, to decrease add more blue
- -IMPORTANT

While removing & replacing the tumblers you must continue to depress the C button

3) Using the tweezers provided move the red & blue tumblers to set your own code

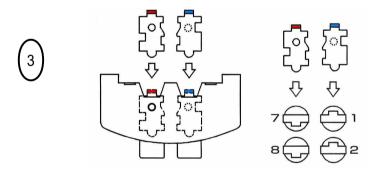

Row 6 to Z Row 1 to Y

The tumblers are shaped to fit into the slots

- All the tumblers in row 6 to Z must be replaced this way as per diagram (3)
- All the tumblers in row 1 to Y must be replaced this way as per diagram (3)
- The coloured tip **must**be facing upward and the square cut out on the side facing the out side edge

DO NOT force the tumblers back in, SIMPLY keep the C button depressed and they will drop in,

if one or more does not drop in make sure they are all positioned correctly, as per above and diagram (3)

Replace the plate and test your code prior to fitting on the door. If refitting to an existing installation ensure you reposition the spindle at the correct angle as per 'Fitting your lock'

